

# Wearables Feature Set

## Application Note

### Application Note – Wearables Feature Set

Document revision	1.2
Document release date	January 2021
Document number	BST-MAS-AN032-02
Sales Part Number(s)	BMA423, BMA425, BMA456
Notes	Data and descriptions in this document are subject to change without notice. Product photos and pictures are for illustration purposes only and may differ from the real product appearance. The technical details and legal disclaimer of the respective product data sheet apply.

## Index of Contents

<b>1. Wearables feature set .....</b>	<b>6</b>
1.1 Global configuration .....	6
1.2 Step counter, step detector and activity recognition .....	9
Step counter .....	9
Step detector .....	9
Activity classification.....	11
1.3 Wrist wear wakeup.....	12
1.4 Tap detector .....	13
1.5 Any-motion/no-motion detection.....	15
Any-motion detection.....	15
No-motion detection .....	16
<b>2. Register description.....</b>	<b>18</b>
<b>2.1 General remarks .....</b>	<b>18</b>
<b>2.2 Register map.....</b>	<b>18</b>
Register (0x00) CHIP_ID.....	27
Register (0x02) ERR_REG .....	27
Register (0x03) STATUS .....	28
Register (0x0A) DATA_0 .....	28
Register (0x0B) DATA_1 .....	29
Register (0x0C) DATA_2 .....	29
Register (0x0D) DATA_3 .....	29
Register (0x0E) DATA_4 .....	30
Register (0x0F) DATA_5.....	30
Register (0x10) DATA_6.....	30
Register (0x11) DATA_7 .....	31
Register (0x12) DATA_8.....	31
Register (0x13) DATA_9.....	31
Register (0x14) DATA_10.....	32

Register (0x15) DATA_11 .....	32
Register (0x16) DATA_12 .....	32
Register (0x17) DATA_13 .....	33
Register (0x18) SENSORTIME_0 .....	33
Register (0x19) SENSORTIME_1 .....	34
Register (0x1A) SENSORTIME_2 .....	34
Register (0x1B) EVENT .....	35
Register (0x1C) INT_STATUS_0 .....	35
Register (0x1D) INT_STATUS_1 .....	36
Register (0x1E) STEP_COUNTER_0 .....	36
Register (0x1F) STEP_COUNTER_1 .....	37
Register (0x20) STEP_COUNTER_2 .....	37
Register (0x21) STEP_COUNTER_3 .....	38
Register (0x22) TEMPERATURE .....	38
Register (0x24) FIFO_LENGTH_0 .....	39
Register (0x25) FIFO_LENGTH_1 .....	39
Register (0x26) FIFO_DATA .....	40
Register (0x27) ACTIVITY_TYPE .....	40
Register (0x2A) INTERNAL_STATUS .....	41
Register (0x40) ACC_CONF .....	42
Register (0x41) ACC_RANGE .....	43
Register (0x44) AUX_CONF .....	44
Register (0x45) FIFO_DOWNS .....	45
Register (0x46) FIFO_WTM_0 .....	45
Register (0x47) FIFO_WTM_1 .....	46
Register (0x48) FIFO_CONFIG_0 .....	46
Register (0x49) FIFO_CONFIG_1 .....	47
Register (0x4B) AUX_DEV_ID .....	48
Register (0x4C) AUX_IF_CONF .....	48
Register (0x4D) AUX_RD_ADDR .....	49
Register (0x4E) AUX_WR_ADDR .....	49
Register (0x4F) AUX_WR_DATA .....	50

Register (0x53) INT1_IO_CTRL .....	50
Register (0x54) INT2_IO_CTRL .....	51
Register (0x55) INT_LATCH .....	52
Register (0x56) INT1_MAP .....	53
Register (0x57) INT2_MAP .....	53
Register (0x58) INT_MAP_DATA .....	54
Register (0x59) INIT_CTRL .....	54
Register (0x5E) FEATURES_IN .....	55
Register (0x5F) INTERNAL_ERROR .....	59
Register (0x6A) NVM_CONF .....	59
Register (0x6B) IF_CONF .....	60
Register (0x6D) ACC_SELF_TEST .....	60
Register (0x70) NV_CONF .....	61
Register (0x71) OFFSET_0 .....	62
Register (0x72) OFFSET_1 .....	62
Register (0x73) OFFSET_2 .....	63
Register (0x7C) PWR_CONF .....	63
Register (0x7D) PWR_CTRL .....	64
Register (0x7E) CMD .....	64
<b>3. Document history and modification .....</b>	<b>65</b>

### List of tables

Table 1: Feature interrupt status registers .....6  
Table 2: Intended positive use-case scenarios of wrist wear wakeup feature. ....12

# 1. Wearables feature set

## 1.1 Global configuration

The Register [FEATURES\\_IN](#) provides description of configuration parameters of the feature interrupt engine. To reconfigure the features, user must perform a burst read of the full content of the Register [FEATURES\\_IN](#), followed by a modification of the content, and finally a burst write of the modified content to the Register [FEATURES\\_IN](#). The content of the successive bytes read or written in burst mode correspond to the single bytes 0x00 to 0x3F described in [FEATURES\\_IN](#).

Prior to reconfiguration of the feature/s, successful initialization of sensor must be ensured (see the description below).

After power up sequence the accelerometer is in suspend mode, the device must be initialized through the following procedures.

- Disable advanced power save mode: [PWR\\_CONF\\_adv\\_power\\_save](#) = 0b0
- Wait for 450 us. The register [SENSORTIME\\_0](#) increments every 39.25 µsec and may be used for accurate timing.
- Write [INIT\\_CTRL\\_init\\_ctrl](#) = 0x00
  - Burst write initialization data to Register [FEATURES\\_IN](#). The configuration file is included in driver. Optionally the configuration file can be written to the Register [FEATURES\\_IN](#) in several consecutive burst write access. Every burst write must contain an even number of bytes.
  - Optionally:  
Burst read configuration file from Register [FEATURES\\_IN](#) and check correctness. Check sensor API for details of timing & length.
- Enable sensor features – write 0x01 into Register [INIT\\_CTRL\\_init\\_ctrl](#). This operation must not be performed more than once after POR or soft reset.
- Wait until Register [INTERNAL\\_STATUS\\_message](#) contains the value 0b1. This will occur in at most 140 – 150 msec.

Read the status of the feature(s) interrupt from the register listed below.

Table 1: Feature interrupt status registers

Feature	Output status
Single-tap	<a href="#">INT_STATUS_0.single_tap_out</a>
Step detector	<a href="#">INT_STATUS_0.step_counter_out</a>
Activity recognition	<a href="#">INT_STATUS_0.activity_type_out</a>
Wrist wear wakeup	<a href="#">INT_STATUS_0.wrist_wear_wakeup_out</a>
Double-tap	<a href="#">INT_STATUS_0.double_tap_out</a>
Any-motion	<a href="#">INT_STATUS_0.any_motion_out</a>
No-motion	<a href="#">INT_STATUS_0.no_motion_out</a>
Error Interrupt	<a href="#">INT_STATUS_0.error_int_out</a>

The interrupt status register also contains a bit for error interrupt, which indicates that the sensor has been stopped due to a fatal error. In such case, the sensor needs to be re-initialized to ensure correct functioning of the device.

For step detector and counter, in addition to an interrupt for each step detection, the number of steps that the user has taken since the start of feature engine is stored in the registers:

[STEP\\_COUNTER\\_0](#), [STEP\\_COUNTER\\_1](#), [STEP\\_COUNTER\\_2](#) and [STEP\\_COUNTER\\_3](#).

### Accelerometer operation mode

When the accelerometer is configured to be in performance mode ([ACC\\_CONF.acc\\_perf\\_mode](#) is 0b1), consecutive samples are measured at maximum output data rate (ODR) with samples equi-spaced in time. The processing of feature engine is carried out correctly ensuring the functional performance. When the operational mode of accelerometer is set to Performance mode, the user ODR and bandwidth settings have no impact on the processing of feature engine.


When the configuration of the accelerometer is set to duty-cycling mode, i.e. performance mode is disabled ([ACC\\_CONF.acc\\_perf\\_mode](#) is 0b0), consecutive samples may not be measured at the maximum ODR and are not equi-spaced in time. For feature engine to work correctly, the user ODR and/or bandwidth settings must meet the following requirements:

1. The user ODR shall be  $\geq 50\text{Hz}$  when single-/double-tap is disabled.
2. The user ODR shall be  $\geq 200\text{Hz}$  when single-/double-tap is enabled.

In case of non-fulfillment of the user ODR requirement, the corresponding error flag is set in the register [INTERNAL\\_STATUS](#).

### Axes remapping for interrupt features

The interrupt feature engine assumes that the sensor co-ordinate system is in alignment with the device co-ordinate system. The assumed default device co-ordinate system is as depicted in the figure below.

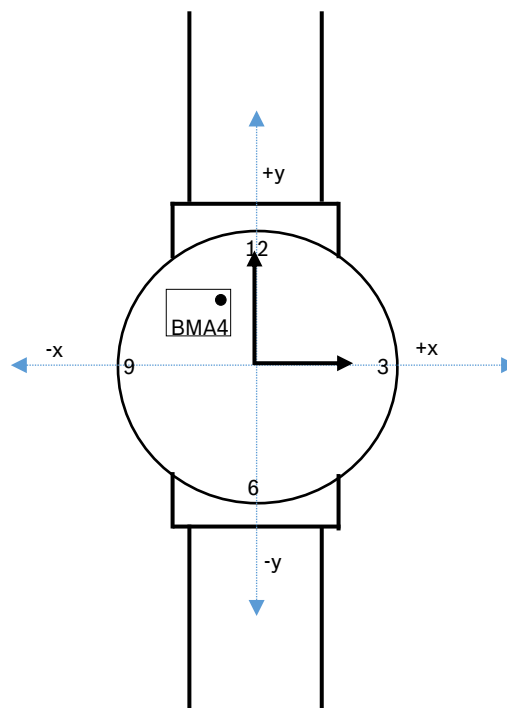

If the sensor placement in the user system is different from that depicted in the figure above, to ensure the correct functioning of the features in the interrupt engine, appropriate axes remapping needs to be applied.

The axes remapping configuration register allows each sensing axis to be remapped to any other axis. Along with the remapping of the sensing axis, it also allows the inversion of the axis. An error interrupt is triggered when more than one axis is remapped to the same axis, e.g.,  $x = x$ ,  $y = x$ ,  $z = z$ .

**Note:**

The axes remapping is applied only on the acceleration signal input to the sensor features. The [DATA 0](#) to [DATA 13](#) registers and FIFO are unmodified by the settings of axes remapping. If required, appropriate remapping should be applied at the driver level.

Configuration settings:

1. [FEATURES\\_IN.general\\_settings.axes\\_remapping.map\\_x\\_axis](#) – describes which axis shall be mapped to x axis.
2. [FEATURES\\_IN.general\\_settings.axes\\_remapping.map\\_x\\_axis\\_sign](#) – describes whether the mapped axis shall be inverted or not to be inverted.
3. [FEATURES\\_IN.general\\_settings.axes\\_remapping.map\\_y\\_axis](#) – describes which axis shall be mapped to y axis.
4. [FEATURES\\_IN.general\\_settings.axes\\_remapping.map\\_y\\_axis\\_sign](#) – describes whether the mapped axis shall be inverted or not to be inverted.
5. [FEATURES\\_IN.general\\_settings.axes\\_remapping.map\\_z\\_axis](#) – describes which axis shall be mapped to z axis.
6. [FEATURES\\_IN.general\\_settings.axes\\_remapping.map\\_z\\_axis\\_sign](#) – describes whether the mapped axis shall be inverted or not to be inverted.



## 1.2 Step counter, step detector and activity recognition

Step detector feature performs the detection of steps taken by the user while walking, running, stair walking, etc. using the tri-axial acceleration signal. Realization of the step detection functionality is in compliance with the requirements of Android 4.4 and above as described under [https://source.android.com/devices/sensors/sensor-types.html#step\\_detector](https://source.android.com/devices/sensors/sensor-types.html#step_detector) to report the step detect with low latency. Precise optimization of the parameters defining the functional behaviour of the step detector algorithm for the device position on the user body as “Wrist” assures the best step detection performance.

Step counter extends the functionality of the step detector by implementation of additional step validation approach and hence yielding the higher accuracy at the cost of slight increase in reporting delay. Step counter implementation complies with the requirements of Android 4.4 and higher stated under [https://source.android.com/devices/sensors/sensor-types.html#step\\_counter](https://source.android.com/devices/sensors/sensor-types.html#step_counter). The approach of step validation rejects or accepts the detected step as legitimate step for counting by analyzing the regularity of occurrence and dynamicity of the scenario.

Step detection and counting features are facilitated to work in parallel with full independence. However, the feature interrupt engine reports the status of step detection and watermark interrupt of step counter on the multiplexed interrupt line. Hence, the functionalities of step detection and watermark interrupt for step counter are mutually exclusive.

### Step counter

Step counter feature can be activated by setting the [FEATURES\\_IN.step\\_counter.settings\\_26.en\\_counter](#). The step counter reports the number of steps taken by the user since the first activation of the feature without any reset. The step counts is reported as 32-bit unsigned integer number stored in registers [STEP\\_COUNTER\\_0](#), [STEP\\_COUNTER\\_1](#), [STEP\\_COUNTER\\_2](#) and [STEP\\_COUNTER\\_3](#). The sum of step detector events may differ from the step count value due to additional step validation by post-processing.

The step count value is reset to zero by enabling the [FEATURES\\_IN.step\\_counter.settings\\_26.reset\\_counter](#) flag. On resetting the step count value, the flag is automatically cleared and counting is restarted.

The watermark interrupt for step counter is useful when the host needs to receive an interrupt every time the user took a certain fixed number of steps. The step counter watermark interrupt is enabled by setting [FEATURES\\_IN.step\\_counter.settings\\_26.en\\_detector](#) to 0 and [FEATURES\\_IN.step\\_counter.settings\\_26.watermark\\_level](#) to greater than 0. E.g., when [FEATURES\\_IN.step\\_counter.settings\\_26.watermark\\_level](#) is set to 10 (holding an implicit factor of 20x), for every 200 steps are elapsed an interrupt will be raised on [INT\\_STATUS\\_0.step\\_counter\\_out](#).

### Step detector

Step Detector feature reports the detected step of the user while walking, running, etc., with low latency. If [FEATURES\\_IN.step\\_counter.settings\\_26.en\\_detector](#) is set, an interrupt is triggered on [INT\\_STATUS\\_0.step\\_counter\\_out](#) for every step detected.

The table below provides the default configuration values for a wearables optimized step detector and counter.

Parameter Name	Wrist Configuration
PARAM_1	301
PARAM_2	31700
PARAM_3	315
PARAM_4	31451
PARAM_5	4
PARAM_6	31551
PARAM_7	27853
PARAM_8	1219
PARAM_9	2437
PARAM_10	1219
PARAM_11	-6420
PARAM_12	17932
PARAM_13	1
PARAM_14	39
PARAM_15	25
PARAM_16	150
PARAM_17	160
PARAM_18	1
PARAM_19	12
PARAM_20	15600
PARAM_21	256
PARAM_22	1
PARAM_23	3
PARAM_24	1
PARAM_25	14

The feature is by default initialized with the configuration optimized for wrist to use. To modify the configuration, the steps provided below must be followed:

1. Disable step counter, step detector, and activity detection
2. Modify the 25 parameters of step counter
3. Enable step counter, step detector, and activity detection

After re-enabling the features, the new configuration parameters will be applied for step detection and counting.

#### Customized Step Counter Sensitivity Configuration (overwrites Step Counter Presets)

The step detector and counter performance can be optimized to any specific use-case scenarios by re-determining and manually re-configuring the parameters in the register map with the support of the corresponding field application engineer. The default parameters are set to wrist configuration during device initialization.

Configuration settings:

1. [FEATURES\\_IN.step\\_counter.settings\\_26.watermark\\_level](#) - A step-counter watermark interrupt is triggered every time the user takes 20 times watermark\_level number of steps. The range is 20 to 20460 steps, with resolution of 20 steps. When set to 0, the step counter watermark functionality is disabled.
2. [FEATURES\\_IN.step\\_counter.settings\\_26.reset\\_counter](#) – Flag to reset the number of steps counted. The reset is applicable only if step counter feature is enabled at-least once and steps count is greater than zero.
3. [FEATURES\\_IN.step\\_counter.settings\\_26.en\\_counter](#) – enable the step counter feature.
4. [FEATURES\\_IN.step\\_counter.settings\\_26.en\\_detector](#) – enable the step detector feature.
5. [FEATURES\\_IN.step\\_counter.settings\\_1.param\\_1](#) to [param\\_25](#) – there are 25 parameters, which configure the use case (wrist or phone).

**Activity classification**

The feature can classify the locomotion state of the user. Still, walking and running are the locomotion states that the feature can distinguish. Every change of the activity is reported by an interrupt on [INT\\_STATUS\\_0.activity\\_type\\_out](#). The actual activity/locomotion state is updated in the register [ACTIVITY\\_TYPE.activity\\_type\\_out](#). The activity classification feature is enabled by setting [FEATURES\\_IN.step\\_counter.settings\\_26.en\\_activity](#).

Configuration settings:

[FEATURES\\_IN.step\\_counter.settings\\_26.en\\_activity](#) – enables activity classification.

### 1.3 Wrist wear wakeup

Wrist wear wakeup feature is designed to detect any natural movement of the user arm to see the dial of watch when wearing a classical wristwatch. This feature is intended to be used as wakeup gesture (i.e. for triggering screen-on or screen-off) in wrist wearables devices.

The feature classifies if the arm is in either of the following two positions:

- Focus position: In this position, the user arm is in front of the body and the user is able to look at the watch dial comfortably.
- Non-focus position: In this position, the user is not able to look at the watch dial.

The positive use-case scenarios for the wrist wear wakeup gesture are described in the table below.

Table 2: Intended positive use-case scenarios of wrist wear wakeup feature.

Environment	Scenario	Device initial position	User movement
Outdoor/indoor/train/bus	Walking	Arm swinging/hand in pocket	Lifts and brings the arm in front of the body to be able to comfortably look at the watch dial
Outdoor/indoor	Walking/running/jogging	Arm swinging	Lifts and brings the arm in front of the body to be able to comfortably look at the watch dial
Outdoor/indoor/train/bus	Sitting/standing	Arm is down on side of the body/hand in pocket	Lifts and brings the arm in front of the body to be able to comfortably look at the watch dial
		Arm is in front of the body	Rolls the wrist to look at the watch dial
Indoor/train	Working with computer	Arm on table or arm rest	Rolls the wrist to look at the watch dial

Reliable functioning of wrist wear wakeup is dependent on the sensor placement in the user system. Implementation of the feature assumes that the sensor co-ordinate frame is in alignment with the end-device/system co-ordinate frame. The depiction of assumed default device/system co-ordinate frame and required relative placement of the sensor is shown in the figure in the “Axes remapping for interrupt features” section. Refer to the section on axes remapping to apply the correct remapping, if required.

#### Configuration settings


[FEATURES\\_IN.wrist\\_wear\\_wakeup.settings.enable](#) – enables/disables the wrist wear wakeup feature.

### 1.4 Tap detector

Tap detector realizes the detection of the user interaction of tapping on the surface of the device. The detected taps on the device depending on spread over time are classified as single-tap or double-tap gesture events. Detection of tap is performed using acceleration signal input from one of the sensing axis of the sensor. The default axis used is set to z-axis. If the direction of the tap is different from z-axis, appropriate axes remapping needs to be applied. Refer to the section on axis remapping.


Single-tap and double-tap gesture detection are implemented as mutually exclusive events i.e. double-tap on the device does not report a single-tap event. Double-tap and single-tap events are mapped on to dedicated interrupt lines, as shown in [Register \(0x1C\) INT\\_STATUS\\_0](#).

#### Timing diagram for single-tap:

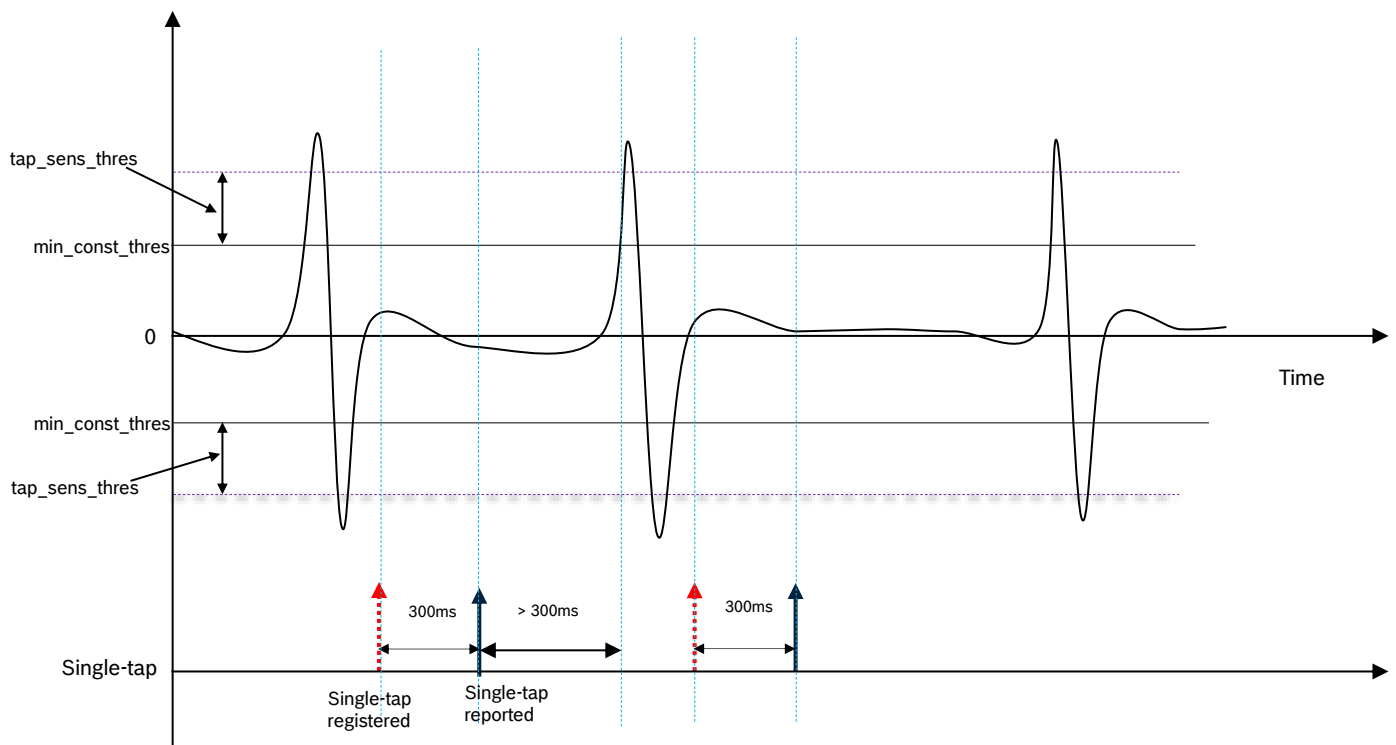

When a single-tap gesture is performed, the single-tap event is reported with a delay of 300ms. The delay in reporting is the confirmation time to ensure that there is no tap in the vicinity. If a second tap is detected within 300ms from the first tap, the probable single-tap event is nullified and double-tap events are output. On reporting a gesture event by the feature, gesture detection is inherently suspended for 300ms.

### Timing diagram for double-tap:

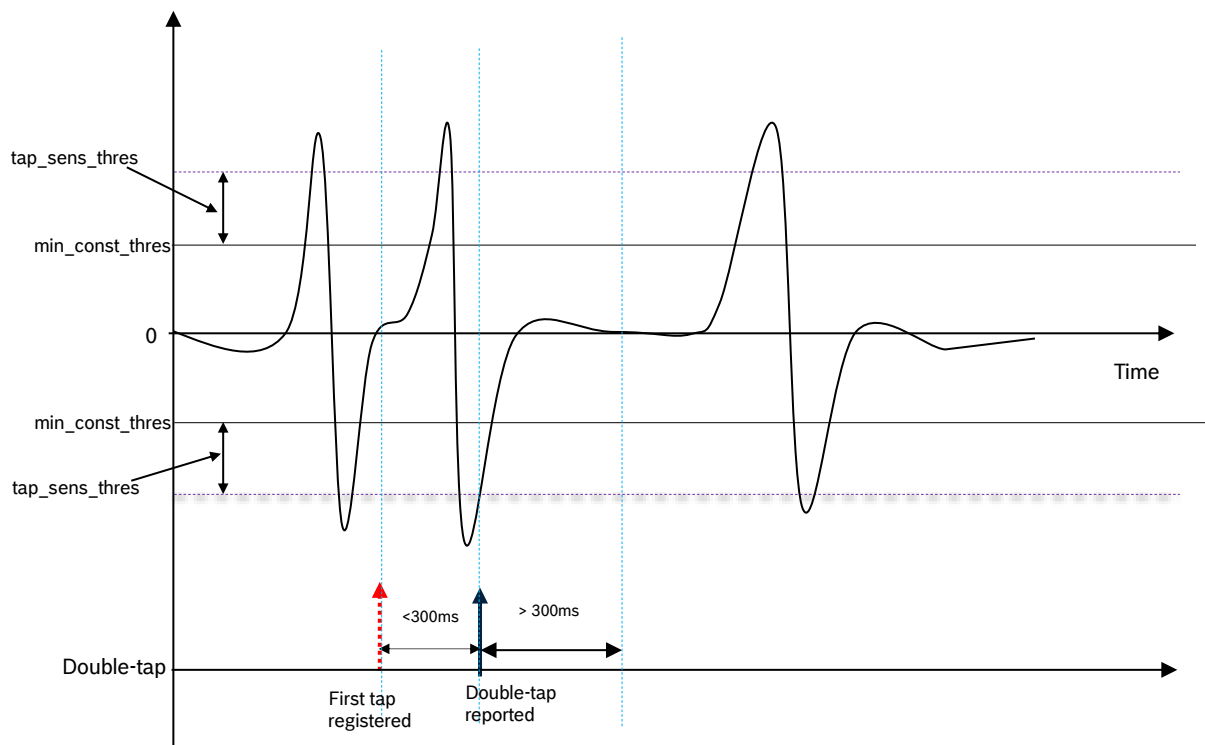

#### How to perform the gesture ideally:

1. Tap on the surface of the device using one finger, slightly harder than just touching.
2. Tap again immediately, if “Double-tap” gesture was intended.
3. Wait for 300ms before performing the next gesture.

#### Configuration settings- Double-tap

1. [FEATURES\\_IN.double-tap.settings.enable](#) – Enable detection of double-tap gesture.
2. [FEATURES\\_IN.double-tap.settings.sensitivity](#) – Configure detection sensitivity, the range goes from 0 (high sensitive) to 7 (low sensitive).

#### Configuration settings- Single-tap

1. [FEATURES\\_IN.single-tap.settings.enable](#) – Enable single-tap.
2. [FEATURES\\_IN.single-tap.settings.sensitivity](#) – Configure detection sensitivity. The range goes from 0 (high sensitive) to 7 (low sensitive).

## 1.5 Any-motion/no-motion detection

### Any-motion detection

The any-motion detection uses the slope between two acceleration signal samples to detect changes in motion. The feature is enabled by setting at least one of the following flags:

[FEATURES\\_IN.any\\_motion.settings\\_2.x\\_en](#), [FEATURES\\_IN.any\\_motion.settings\\_2.y\\_en](#) and

[FEATURES\\_IN.any\\_motion.settings\\_2.z\\_en](#), respectively for each axis.

It generates an interrupt when the absolute value of the slope exceeds the configurable


[FEATURES\\_IN.any\\_motion.settings\\_1.threshold](#) for consecutive

[FEATURES\\_IN.any\\_motion.settings\\_2.duration](#) samples.

The slope is computed between the current acceleration sample and the reference sample. The

reference sample is updated when the any-motion interrupt is triggered. The interrupt is reset as soon

as the slope falls below the [FEATURES\\_IN.any\\_motion.setings\\_1.threshold](#).

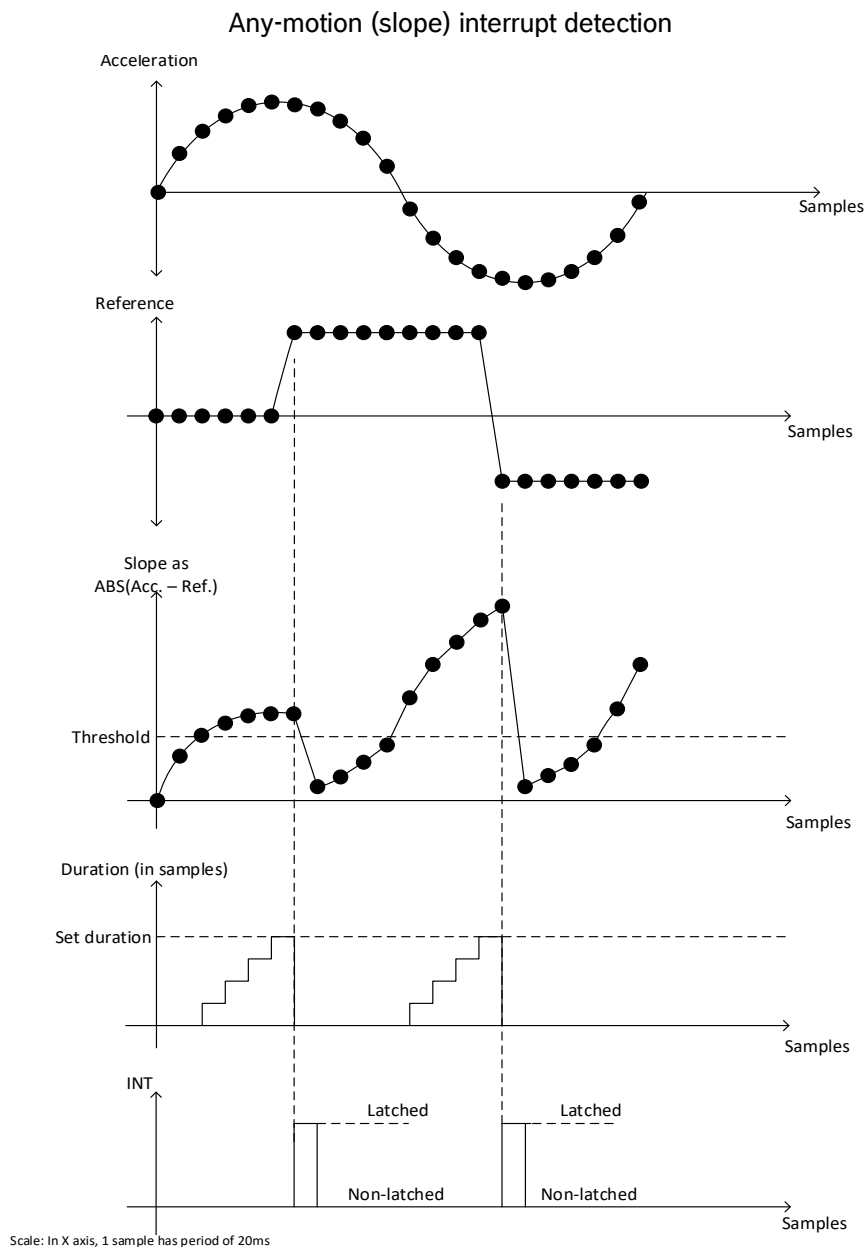

#### Configuration settings:

1. [FEATURES\\_IN.any\\_motion.settings\\_1.threshold](#) – the slope threshold.
2. [FEATURES\\_IN.any\\_motion.settings\\_2.duration](#) – the number of consecutive data points for which the threshold condition must be respected, for interrupt assertion.
3. [FEATURES\\_IN.any\\_motion.settings\\_2.x\\_en](#) – indicates if this feature is enabled for x axis.
4. [FEATURES\\_IN.any\\_motion.settings\\_2.y\\_en](#) – indicates if this feature is enabled for y axis.
5. [FEATURES\\_IN.any\\_motion.settings\\_2.z\\_en](#) – indicates if this feature is enabled for z axis.


#### **No-motion detection**

The no-motion detection uses the slope between two consecutive acceleration signal samples to detect static state of the device. The interrupt is enabled by setting at least one of the following flags: [FEATURES\\_IN.no\\_motion.settings\\_2.x\\_en](#), [FEATURES\\_IN.no\\_motion.settings\\_2.y\\_en](#) and [FEATURES\\_IN.no\\_motion.settings\\_2.z\\_en](#), respectively for each axis.

No-motion interrupt is triggered when the slope on all selected axis remains smaller than a configurable duration configured by [FEATURES\\_IN.no\\_motion.settings\\_1.threshold](#). The signals and timings relevant to the no-motion interrupt functionality are depicted in the figure below.



## Signal timings No-motion interrupt

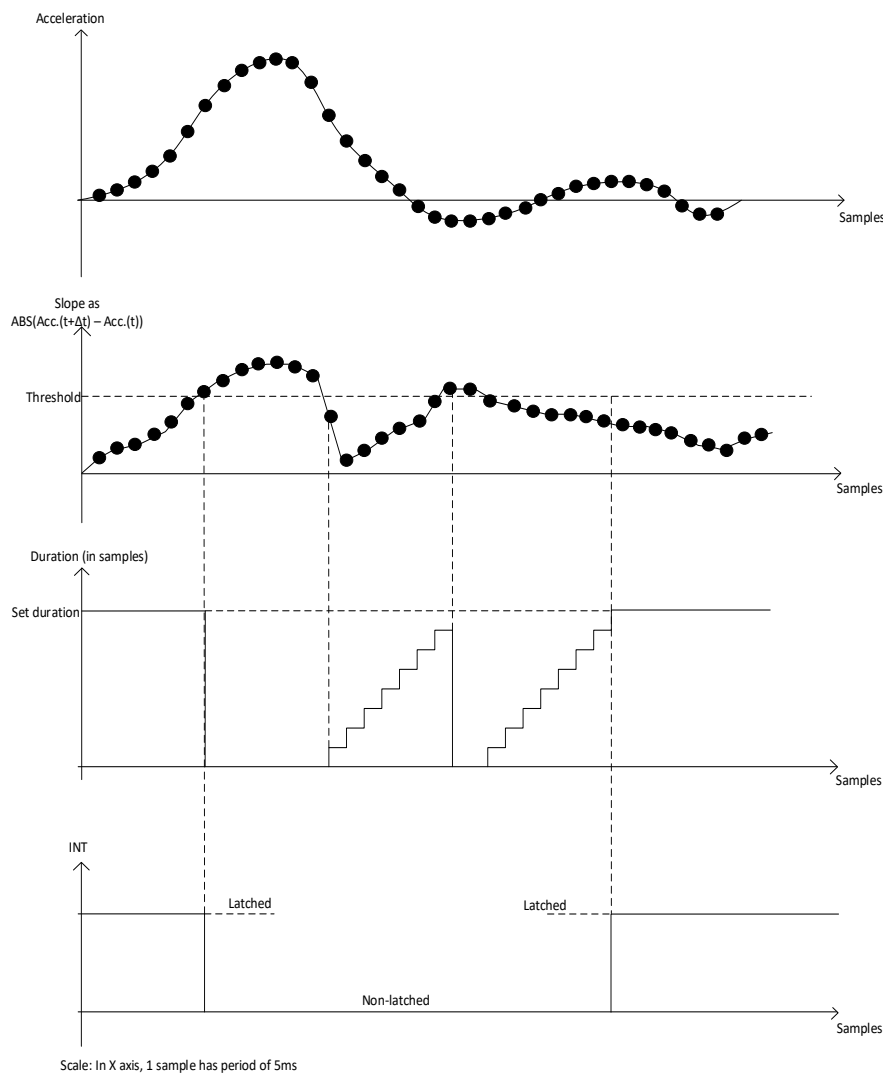

Register [FEATURES\\_IN.no\\_motion.settings\\_2.duration](#) defines the number of consecutive slope data points of the selected axis which must exceed the threshold for an interrupt to be asserted.

#### Configuration settings:

1. [FEATURES\\_IN.no\\_motion.settings\\_1.threshold](#) – the slope threshold.
2. [FEATURES\\_IN.no\\_motion.settings\\_2.duration](#) – the number of consecutive data points for which the threshold condition must be respected, for interrupt assertion.
3. [FEATURES\\_IN.no\\_motion.settings\\_2.x\\_en](#) – indicates if this feature is enabled for x axis.
4. [FEATURES\\_IN.no\\_motion.settings\\_2.y\\_en](#) – indicates if this feature is enabled for y axis.
5. [FEATURES\\_IN.no\\_motion.settings\\_2.z\\_en](#) – indicates if this feature is enabled for z axis.

## 2. Register description

### 2.1 General remarks

Registers can be read and written in all power configurations with the exception of [FEATURES\\_IN](#) and [FIFO\\_DATA](#) which need [PWR\\_CONF.adv\\_power\\_save](#) set to 0b0.

### 2.2 Register map

read/write	read only	write only	reserved
------------	-----------	------------	----------

ID:											
Register Address	Register Name	Default Value	7	6	5	4	3	2	1	0	
0x7E	<a href="#">CMD</a>	0x00	cmd								
0x7D	<a href="#">PWR_CTL</a>	0x00	reserved					acc_en	reserved	aux_en	
0x7C	<a href="#">PWR_CONF</a>	0x03	reserved						fifo_self_wakeup	adv_power_save	
0x7B	-	-	reserved								
...	-	-	reserved								
0x74	-	-	reserved								
0x73	<a href="#">OFFSET_2</a>	0x00	off_acc_z								
0x72	<a href="#">OFFSET_1</a>	0x00	off_acc_y								
0x71	<a href="#">OFFSET_0</a>	0x00	off_acc_x								
0x70	<a href="#">NV_CONFIG</a>	0x00	reserved				acc_off_en	i2c_wdt_en	i2c_wdt_sel	spi_en	
0x6F	-	-	reserved								
0x6E	-	-	reserved								
0x6D	<a href="#">ACC_SELF_TEST_I</a>	0x00	reserved				acc_self_test_amp	acc_self_test_sign	reserved	acc_self_test_en	
0x6C	-	-	reserved								
0x6B	<a href="#">IF_CONFIG</a>	0x00	reserved			if_mode	reserved			spi3	
0x6A	<a href="#">NVM_CONFIG</a>	0x00	reserved						nvm_prog_en	reserved	
0x69	-	-	reserved								
...	-	-	reserved								
0x60	-	-	reserved								
0x5F	<a href="#">INTERNAL_ERROR_OR</a>	0x00	reserved					int_err_2	int_err_1	reserved	
0x5E	<a href="#">FEATURES_IN</a>	0x00	features_in								
0x5D	-	-	reserved								
...	-	-	reserved								

0x5A	-	-	reserved							
0x59	<a href="#">INIT_CTRL</a>	0x90	init_ctrl							
0x58	<a href="#">INT_MAP_DATA</a>	0x00	reserved	int2_drdy	int2_fwm	int2_full	reserved	int1_drdy	int1_fwm	int1_full
0x57	<a href="#">INT2_MAP</a>	0x00	error_int_out	no_motion_out	any_motion_out	double_tap_out	wrist_wear_wakeup_out	activity_type_out	step_counter_out	single_tap_out
0x56	<a href="#">INT1_MAP</a>	0x00	error_int_out	no_motion_out	any_motion_out	double_tap_out	wrist_wear_wakeup_out	activity_type_out	_counter_out	single_tap_out
0x55	<a href="#">INT_LATCH</a>	0x00	reserved							int_latch
0x54	<a href="#">INT2_IO_CTRL</a>	0x00	reserved			input_en	output_en	od	lvl	edge_ctrl
0x53	<a href="#">INT1_IO_CTRL</a>	0x00	reserved			input_en	output_en	od	lvl	edge_ctrl
0x52	-	-	reserved							
...	-	-	reserved							
0x50	-	-	reserved							
0x4F	<a href="#">AUX_WRITE_DATA</a>	0x02	write_data							
0x4E	<a href="#">AUX_WRITE_ADDR</a>	0x4C	write_addr							
0x4D	<a href="#">AUX_READ_ADDR</a>	0x42	read_addr							
0x4C	<a href="#">AUX_IF_CONF</a>	0x83	aux_manual_en	reserved					aux_rd_burst	
0x4B	<a href="#">AUX_DEVICE_ID</a>	0x20	i2c_device_addr							reserved
0x4A	-	-	reserved							
0x49	<a href="#">FIFO_CONFIG_1</a>	0x10	reserved	fifo_acc_en	fifo_aux_en	fifo_header_en	fifo_tag_int1_en	fifo_tag_int2_en	reserved	
0x48	<a href="#">FIFO_CONFIG_0</a>	0x02	reserved						fifo_time_en	fifo_stop_on_full
0x47	<a href="#">FIFO_WATER_MARK_1</a>	0x02	reserved			fifo_water_mark_12_8				
0x46	<a href="#">FIFO_WATER_MARK_0</a>	0x00	fifo_water_mark_7_0							
0x45	<a href="#">FIFO_DOWNS</a>	0x80	acc_fifo_filt_data	acc_fifo_downs			reserved			
0x44	<a href="#">AUX_OFFSET</a>	0x46	aux_offset				aux_odr			
0x43	-	-	reserved							
0x42	-	-	reserved							
0x41	<a href="#">ACC_RANGE</a>	0x01	reserved						acc_range	

0x40	<a href="#">ACC_CO NF</a>	0xA8	acc_perf _mode	acc_bwp			acc_odr				
0x3F	-	-	reserved								
...	-	-	reserved								
0x2B	-	-	reserved								
0x2A	<a href="#">INTERN AL_STAT US</a>	0x00	odr_high _error	odr_50hz _error	axes_re map_err or	message					
0x29	-	-	reserved								
0x28	-	-	reserved								
0x27	<a href="#">ACTIVIT Y_TYPE</a>	0x00	reserved							activity_type_out	
0x26	<a href="#">FIFO_DA TA</a>	0x00	fifo_data								
0x25	<a href="#">FIFO_LE NGTH_1</a>	0x00	reserved		fifo_byte_counter_13_8						
0x24	<a href="#">FIFO_LE NGTH_0</a>	0x00	fifo_byte_counter_7_0								
0x23	-	-	reserved								
0x22	<a href="#">TEMPER ATURE</a>	0x00	temperature								
0x21	<a href="#">STEP_C OUNTER _3</a>	0x00	step_counter_out_3								
0x20	<a href="#">STEP_C OUNTER _2</a>	0x00	step_counter_out_2								
0x1F	<a href="#">STEP_C OUNTER _1</a>	0x00	step_counter_out_1								
0x1E	<a href="#">STEP_C OUNTER _0</a>	0x00	step_counter_out_0								
0x1D	<a href="#">INT_STA TUS_1</a>	0x00	acc_drdy _int	reserved	aux_drdy _int	reserved			fwm_int	full_int	
0x1C	<a href="#">INT_STA TUS_0</a>	0x00	error_int _out	no_motio n_out	any_moti on_out	double_t ap_out	wrist_we ar_wake up_out	activity_t ype_out	step_cou nter_out	single_ta p_out	
0x1B	<a href="#">EVENT</a>	0x01	reserved								por_dete cted
0x1A	<a href="#">SENSOR TIME_2</a>	0x00	sensor_time_23_16								
0x19	<a href="#">SENSOR TIME_1</a>	0x00	sensor_time_15_8								
0x18	<a href="#">SENSOR TIME_0</a>	0x00	sensor_time_7_0								
0x17	<a href="#">DATA_13</a>	0x00	acc_z_11_4								
0x16	<a href="#">DATA_12</a>	0x00	acc_z_3_0				reserved				
0x15	<a href="#">DATA_11</a>	0x00	acc_y_11_4								
0x14	<a href="#">DATA_10</a>	0x00	acc_y_3_0				reserved				

0x13	<a href="#">DATA 9</a>	0x00	acc_x_11_4						
0x12	<a href="#">DATA 8</a>	0x00	acc_x_3_0				reserved		
0x11	<a href="#">DATA 7</a>	0x00	aux_r_11_4						
0x10	<a href="#">DATA 6</a>	0x00	aux_r_3_0				reserved		
0x0F	<a href="#">DATA 5</a>	0x00	aux_z_11_4						
0x0E	<a href="#">DATA 4</a>	0x00	aux_z_3_0				reserved		
0x0D	<a href="#">DATA 3</a>	0x00	aux_y_11_4						
0x0C	<a href="#">DATA 2</a>	0x00	aux_y_3_0				reserved		
0x0B	<a href="#">DATA 1</a>	0x00	aux_x_11_4						
0x0A	<a href="#">DATA 0</a>	0x00	aux_x_3_0				reserved		
0x09	-	-	reserved						
...	-	-	reserved						
0x04	-	-	reserved						
0x03	<a href="#">STATUS</a>	0x10	drdy_acc	reserved	drdy_aux	cmd_rdy	reserved	aux_man_op	reserved
0x02	<a href="#">ERR REG</a>	0x00	aux_err	fifo_err	reserved	error_code		cmd_err	fatal_err
0x01	-	-	reserved						
0x00	<a href="#">CHIP ID</a>	0x13	chip_id						

FEATURES\_IN

Register Address	Register Name	Default Value	7	6	5	4	3	2	1	0	
0x5E: 0x45	<a href="#">general settings. axes_re_mapping[1]</a>	0x00	reserved								map_z_axis_sign
0x5E: 0x44	<a href="#">general settings. axes_re_mapping[0]</a>	0x88	map_z_axis	map_y_axis_sign	map_y_axis	map_x_axis_sign	map_x_axis				
0x5E: 0x43	<a href="#">general settings.config_id[1]</a>	0x00	identification								
0x5E: 0x42	<a href="#">general settings.config_id[0]</a>	0x00	identification								
0x5E: 0x41	<a href="#">wrist wear wake up.settings[1]</a>	0x00	reserved								
0x5E: 0x40	<a href="#">wrist wear wake up.settings[0]</a>	0x00	reserved								enable

	<a href="#">up.settins[0]</a>							
0x5E: 0x3F	<a href="#">double tap.settins[1]</a>	0x00	reserved					
0x5E: 0x3E	<a href="#">double tap.settins[0]</a>	0x06	reserved			sensitivity		enable
0x5E: 0x3D	<a href="#">single tap.setting[1]</a>	0x00	reserved					
0x5E: 0x3C	<a href="#">single tap.setting[0]</a>	0x06	reserved			sensitivity		enable
0x5E: 0x3B	<a href="#">step counter.setting[1]</a>	0x00	reserved	en_activity	en_counter	en_detector	reset_counter	watermark_level
0x5E: 0x3A	<a href="#">step counter.setting[0]</a>	0x00	watermark_level					
0x5E: 0x39	<a href="#">step counter.setting[1]</a>	0x00	param_25					
0x5E: 0x38	<a href="#">step counter.setting[0]</a>	0x0E	param_25					
0x5E: 0x37	<a href="#">step counter.setting[1]</a>	0x00	param_24					
0x5E: 0x36	<a href="#">step counter.setting[0]</a>	0x01	param_24					
0x5E: 0x35	<a href="#">step counter.setting[1]</a>	0x00	param_23					
0x5E: 0x34	<a href="#">step counter.setting[0]</a>	0x03	param_23					
0x5E: 0x33	<a href="#">step counter.setting[1]</a>	0x00	param_22					

0x5E: 0x32	<a href="#">step_counter.settings_22[0]</a>	0x01	param_22
0x5E: 0x31	<a href="#">step_counter.settings_21[1]</a>	0x01	param_21
0x5E: 0x30	<a href="#">step_counter.settings_21[0]</a>	0x00	param_21
0x5E: 0x2F	<a href="#">step_counter.settings_20[1]</a>	0x3C	param_20
0x5E: 0x2E	<a href="#">step_counter.settings_20[0]</a>	0xF0	param_20
0x5E: 0x2D	<a href="#">step_counter.settings_19[1]</a>	0x00	param_19
0x5E: 0x2C	<a href="#">step_counter.settings_19[0]</a>	0x0C	param_19
0x5E: 0x2B	<a href="#">step_counter.settings_18[1]</a>	0x00	param_18
0x5E: 0x2A	<a href="#">step_counter.settings_18[0]</a>	0x01	param_18
0x5E: 0x29	<a href="#">step_counter.settings_17[1]</a>	0x00	param_17
0x5E: 0x28	<a href="#">step_counter.settings_17[0]</a>	0xA0	param_17
0x5E: 0x27	<a href="#">step_counter.settings_16[1]</a>	0x00	param_16
0x5E: 0x26	<a href="#">step_counter.settings_16</a>	0x96	param_16

	<a href="#">ngs_16[0]</a> ↓		
0x5E: 0x25	<a href="#">step_counter.setter.ings_15[1]</a> ↓	0x00	param_15
0x5E: 0x24	<a href="#">step_counter.setter.ings_15[0]</a> ↓	0x19	param_15
0x5E: 0x23	<a href="#">step_counter.setter.ings_14[1]</a> ↓	0x00	param_14
0x5E: 0x22	<a href="#">step_counter.setter.ings_14[0]</a> ↓	0x27	param_14
0x5E: 0x21	<a href="#">step_counter.setter.ings_13[1]</a> ↓	0x00	param_13
0x5E: 0x20	<a href="#">step_counter.setter.ings_13[0]</a> ↓	0x01	param_13
0x5E: 0x1F	<a href="#">step_counter.setter.ings_12[1]</a> ↓	0x46	param_12
0x5E: 0x1E	<a href="#">step_counter.setter.ings_12[0]</a> ↓	0x0C	param_12
0x5E: 0x1D	<a href="#">step_counter.setter.ings_11[1]</a> ↓	0xE6	param_11
0x5E: 0x1C	<a href="#">step_counter.setter.ings_11[0]</a> ↓	0xEC	param_11
0x5E: 0x1B	<a href="#">step_counter.setter.ings_10[1]</a> ↓	0x04	param_10
0x5E: 0x1A	<a href="#">step_counter.setter.ings_10[0]</a> ↓	0xC3	param_10



0x5E: 0x19	<a href="#">step_counter.settings_9[1]</a>	0x09	param_9
0x5E: 0x18	<a href="#">step_counter.settings_9[0]</a>	0x85	param_9
0x5E: 0x17	<a href="#">step_counter.settings_8[1]</a>	0x04	param_8
0x5E: 0x16	<a href="#">step_counter.settings_8[0]</a>	0xC3	param_8
0x5E: 0x15	<a href="#">step_counter.settings_7[1]</a>	0x6C	param_7
0x5E: 0x14	<a href="#">step_counter.settings_7[0]</a>	0xCD	param_7
0x5E: 0x13	<a href="#">step_counter.settings_6[1]</a>	0x7B	param_6
0x5E: 0x12	<a href="#">step_counter.settings_6[0]</a>	0x3F	param_6
0x5E: 0x11	<a href="#">step_counter.settings_5[1]</a>	0x00	param_5
0x5E: 0x10	<a href="#">step_counter.settings_5[0]</a>	0x04	param_5
0x5E: 0x0F	<a href="#">step_counter.settings_4[1]</a>	0x7A	param_4
0x5E: 0x0E	<a href="#">step_counter.settings_4[0]</a>	0xDB	param_4
0x5E: 0x0D	<a href="#">step_counter.settings_3[1]</a>	0x01	param_3
0x5E: 0x0C	<a href="#">step_counter.settings_3[0]</a>	0x3B	param_3
0x5E: 0x0B	<a href="#">step_counter.settings_2[1]</a>	0x7B	param_2
0x5E: 0x0A	<a href="#">step_counter.settings_2[0]</a>	0xD4	param_2

0x5E: 0x09	<a href="#">step_counter.settings_1[1]</a>	0x01	param_1			
0x5E: 0x08	<a href="#">step_counter.settings_1[0]</a>	0x2D	param_1			
0x5E: 0x07	<a href="#">no_motion.settings_2[1]</a>	0x00	z_en	y_en	x_en	duration
0x5E: 0x06	<a href="#">no_motion.settings_2[0]</a>	0x05	duration			
0x5E: 0x05	<a href="#">no_motion.settings_1[1]</a>	0x00	reserved			threshold
0x5E: 0x04	<a href="#">no_motion.settings_1[0]</a>	0xAA	threshold			
0x5E: 0x03	<a href="#">any_motion.settings_2[1]</a>	0x00	z_en	y_en	x_en	duration
0x5E: 0x02	<a href="#">any_motion.settings_2[0]</a>	0x05	duration			
0x5E: 0x01	<a href="#">any_motion.settings_1[1]</a>	0x00	reserved			threshold
0x5E: 0x00	<a href="#">any_motion.settings_1[0]</a>	0xAA	threshold			

**Register (0x00) CHIP\_ID**

DESCRIPTION: Chip identification code

RESET: See the datasheet of your product

DEFINITION (Go to [register map](#)):

Name	Register (0x00) CHIP_ID			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value				
Content	chip_id			
Bit	3	2	1	0
Read/Write	R	R	R	R
Reset Value				
Content	chip_id			

chip\_id: Chip identification code of your product (please see the datasheet)

**Register (0x02) ERR\_REG**

DESCRIPTION: Reports sensor error conditions

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x02) ERR_REG			
Bit	7	6	5	4
Read/Write	R	R	n/a	R
Reset Value	0	0	0	0
Content	aux_err	fifo_err	reserved	error_code
Bit	3	2	1	0
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	error_code		cmd_err	fatal_err

fatal\_err: Fatal Error, chip is not in operational state (Boot-, power-system). This flag will be reset only by power-on reset or soft reset.

cmd\_err: Command execution failed.

error\_code: Error codes for persistent errors

error_code		
0x00	no_error	no error is reported
0x01	acc_err	error in Register ACC_CONF

fifo\_err: Error in FIFO detected: Input data was discarded in stream mode. This flag will be reset when read.

aux\_err: Error in I2C-Master detected. This flag will be reset when read.

**Register (0x03) STATUS**

DESCRIPTION: Sensor status flags

RESET: 0x10

DEFINITION (Go to [register map](#)):

Name	Register (0x03) STATUS			
Bit	7	6	5	4
Read/Write	R	n/a	R	R
Reset Value	0	0	0	1
Content	drdy_acc	reserved	drdy_aux	cmd_rdy
Bit	3	2	1	0
Read/Write	n/a	R	n/a	n/a
Reset Value	0	0	0	0
Content	reserved	aux_man_op	reserved	

aux\_man\_op: '1' ('0') indicate a (no) manual auxiliary interface operation is ongoing.

cmd\_rdy: CMD decoder status. '0' -&gt; Command in progress '1' -&gt; Command decoder is ready to accept a new command.

drdy\_aux: Data ready for auxiliary sensor. It is reset when one auxiliary DATA register is read out.

drdy\_acc: Data ready for accelerometer. It is reset when one accelerometer DATA register is read out.

**Register (0x0A) DATA\_0**

DESCRIPTION: AUX\_X(LSB)

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x0A) DATA_0			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	aux_x_3_0			
Bit	3	2	1	0
Read/Write	n/a	n/a	n/a	n/a
Reset Value	0	0	0	0
Content	reserved			

**Register (0x0B) DATA\_1**

DESCRIPTION: AUX\_X(MSB)

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x0B) DATA_1			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	aux_x_11_4			
Bit	3	2	1	0
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	aux_x_11_4			

**Register (0x0C) DATA\_2**

DESCRIPTION: AUX\_Y(LSB)

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x0C) DATA_2			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	aux_y_3_0			
Bit	3	2	1	0
Read/Write	n/a	n/a	n/a	n/a
Reset Value	0	0	0	0
Content	reserved			

**Register (0x0D) DATA\_3**

DESCRIPTION: AUX\_Y(MSB)

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x0D) DATA_3			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	aux_y_11_4			
Bit	3	2	1	0
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	aux_y_11_4			

**Register (0x0E) DATA\_4**

DESCRIPTION: AUX\_Z(LSB)

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x0E) DATA_4			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	aux_z_3_0			
Bit	3	2	1	0
Read/Write	n/a	n/a	n/a	n/a
Reset Value	0	0	0	0
Content	reserved			

**Register (0x0F) DATA\_5**

DESCRIPTION: AUX\_Z(MSB)

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x0F) DATA_5			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	aux_z_11_4			
Bit	3	2	1	0
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	aux_z_11_4			

**Register (0x10) DATA\_6**

DESCRIPTION: AUX\_R(LSB)

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x10) DATA_6			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	aux_r_3_0			
Bit	3	2	1	0
Read/Write	n/a	n/a	n/a	n/a
Reset Value	0	0	0	0
Content	reserved			

**Register (0x11) DATA\_7**

DESCRIPTION: AUX\_R(MSB)

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x11) DATA_7			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	aux_r_11_4			
Bit	3	2	1	0
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	aux_r_11_4			

**Register (0x12) DATA\_8**

DESCRIPTION: ACC\_X(LSB)

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x12) DATA_8			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	acc_x_3_0			
Bit	3	2	1	0
Read/Write	n/a	n/a	n/a	n/a
Reset Value	0	0	0	0
Content	reserved			

**Register (0x13) DATA\_9**

DESCRIPTION: ACC\_X(MSB)

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x13) DATA_9			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	acc_x_11_4			
Bit	3	2	1	0
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	acc_x_11_4			

**Register (0x14) DATA\_10**

DESCRIPTION: ACC\_Y(LSB)

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x14) DATA_10			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	acc_y_3_0			
Bit	3	2	1	0
Read/Write	n/a	n/a	n/a	n/a
Reset Value	0	0	0	0
Content	reserved			

**Register (0x15) DATA\_11**

DESCRIPTION: ACC\_Y(MSB)

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x15) DATA_11			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	acc_y_11_4			
Bit	3	2	1	0
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	acc_y_11_4			

**Register (0x16) DATA\_12**

DESCRIPTION: ACC\_Z(LSB)

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x16) DATA_12			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	acc_z_3_0			
Bit	3	2	1	0
Read/Write	n/a	n/a	n/a	n/a
Reset Value	0	0	0	0
Content	reserved			



**Register (0x17) DATA\_13**

DESCRIPTION: ACC\_Z(MSB)

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x17) DATA_13			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	acc_z_11_4			
Bit	3	2	1	0
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	acc_z_11_4			

**Register (0x18) SENSORTIME\_0**

DESCRIPTION: Sensor time &lt;7:0&gt;

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x18) SENSORTIME_0			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	sensor_time_7_0			
Bit	3	2	1	0
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	sensor_time_7_0			

sensor\_time\_7\_0: Sensor time &lt;7:0&gt; in units of 39.0625 us.

**Register (0x19) SENSORTIME\_1**

DESCRIPTION: Sensor time &lt;15:8&gt;

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x19) SENSORTIME_1			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	sensor_time_15_8			
Bit	3	2	1	0
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	sensor_time_15_8			

sensor\_time\_15\_8: Sensor time &lt;15:8&gt; in units of 10 ms.

**Register (0x1A) SENSORTIME\_2**

DESCRIPTION: Sensor time &lt;23:16&gt;

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x1A) SENSORTIME_2			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	sensor_time_23_16			
Bit	3	2	1	0
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	sensor_time_23_16			

sensor\_time\_23\_16: Sensor time &lt;23:16&gt; in units of 2.56 s.

**Register (0x1B) EVENT**

DESCRIPTION: Sensor status flags

RESET: 0x01

DEFINITION (Go to [register map](#)):

Name	Register (0x1B) EVENT			
Bit	7	6	5	4
Read/Write	n/a	n/a	n/a	n/a
Reset Value	0	0	0	0
Content	reserved			
Bit	3	2	1	0
Read/Write	n/a	n/a	n/a	R
Reset Value	0	0	0	1
Content	reserved			por_detected

por\_detected: '1' after device power up or soft reset. Clear-on-read

**Register (0x1C) INT\_STATUS\_0**

DESCRIPTION: Interrupt/Feature Status. Will be cleared on read.

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x1C) INT_STATUS_0			
Bit	7	6	5	4
Read/Write	R	R	R	n/a
Reset Value	0	0	0	0
Content	error_int_out	no_motion_out	any_motion_out	double_tap_out
Bit	3	2	1	0
Read/Write	R	R	R	n/a
Reset Value	0	0	0	0
Content	wrist_wear_wakeup_out	activity_type_out	step_counter_out	single_tap_out

single_tap_out:	Single-tap output
step_counter_out:	Step-counter watermark or Step-detector output.
activity_type_out:	Step counter activity output (Running, Walking, Still)
wrist_wear_wakeup_out:	Wrist wear wakeup output
double_tap_out:	Double-tap output
any_motion_out:	Any-motion detection output
no_motion_out:	No-motion detection output
error_int_out:	Error interrupt output

**Register (0x1D) INT\_STATUS\_1**

DESCRIPTION: Interrupt Status. Will be cleared on read.

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x1D) INT_STATUS_1			
Bit	7	6	5	4
Read/Write	R	n/a	R	n/a
Reset Value	0	0	0	0
Content	acc_drdy_int	reserved	aux_drdy_int	reserved
Bit	3	2	1	0
Read/Write	n/a	n/a	R	R
Reset Value	0	0	0	0
Content	reserved		fwm_int	ffull_int

ffull\_int: FIFO Full Interrupt

fwm\_int: FIFO Watermark Interrupt

aux\_drdy\_int: Auxiliary sensor data ready interrupt

acc\_drdy\_int: Accelerometer data ready interrupt

**Register (0x1E) STEP\_COUNTER\_0**

DESCRIPTION: Step counting value byte-0

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x1E) STEP_COUNTER_0			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	step_counter_out_0			
Bit	3	2	1	0
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	step_counter_out_0			

step\_counter\_out\_0: Step counting value byte-0 (least significant byte), unit is step.

**Register (0x1F) STEP\_COUNTER\_1**

DESCRIPTION: Step counting value byte-1

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x1F) STEP_COUNTER_1			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	step_counter_out_1			
Bit	3	2	1	0
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	step_counter_out_1			

step\_counter\_out\_1: Step counting value byte-1

**Register (0x20) STEP\_COUNTER\_2**

DESCRIPTION: Step counting value byte-2

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x20) STEP_COUNTER_2			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	step_counter_out_2			
Bit	3	2	1	0
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	step_counter_out_2			

step\_counter\_out\_2: Step counting value byte-2

**Register (0x21) STEP\_COUNTER\_3**

DESCRIPTION: Step counting value byte-3

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x21) STEP_COUNTER_3			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	step_counter_out_3			
Bit	3	2	1	0
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	step_counter_out_3			

step\_counter\_out\_3: Step counting value byte-3 (most significant byte)

**Register (0x22) TEMPERATURE**

DESCRIPTION: Contains the temperature value of the sensor

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x22) TEMPERATURE			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	temperature			
Bit	3	2	1	0
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	temperature			

temperature: Temperature value in two's complement representation in unit of 1 Kelvin: 0x00 corresponds to 23 degrees Celsius.

**Register (0x24) FIFO\_LENGTH\_0**

DESCRIPTION: FIFO byte count register (LSB)

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x24) FIFO_LENGTH_0			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	fifo_byte_counter_7_0			
Bit	3	2	1	0
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	fifo_byte_counter_7_0			

fifo\_byte\_counter\_7\_0: Current fill level of FIFO buffer (unit: byte).

**Register (0x25) FIFO\_LENGTH\_1**

DESCRIPTION: FIFO byte count register (MSB)

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x25) FIFO_LENGTH_1			
Bit	7	6	5	4
Read/Write	n/a	n/a	R	R
Reset Value	0	0	0	0
Content	reserved		fifo_byte_counter_13_8	
Bit	3	2	1	0
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	fifo_byte_counter_13_8			

fifo\_byte\_counter\_13\_8: FIFO byte counter bits 13...8.

### Register (0x26) FIFO\_DATA

DESCRIPTION: FIFO data output register

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x26) FIFO_DATA			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	fifo_data			
Bit	3	2	1	0
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	fifo_data			

fifo\_data: FIFO read data, for burst read.

### Register (0x27) ACTIVITY\_TYPE

DESCRIPTION: Step counter activity output (Running, Walking, Still)

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x27) ACTIVITY_TYPE			
Bit	7	6	5	4
Read/Write	n/a	n/a	n/a	n/a
Reset Value	0	0	0	0
Content	reserved			
Bit	3	2	1	0
Read/Write	n/a	n/a	R	R
Reset Value	0	0	0	0
Content	reserved		activity_type_out	

activity\_type\_out: Step counter activity output (Running, Walking, Still)

activity_type_out		
0x00	still	user not moving
0x01	walking	user walking
0x02	running	user running
0x03	unknown	unknown state



**Register (0x2A) INTERNAL\_STATUS**

DESCRIPTION: Error bits and message indicating internal status

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x2A) INTERNAL_STATUS			
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	odr_high_error	odr_50hz_error	axes_remap_error	message
Bit	3	2	1	0
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	message			

message: Internal Status Message

message		
0x00	not_init	ASIC is not initialized
0x01	init_ok	ASIC initialized
0x02	init_err	Initialization error
0x03	drv_err	Invalid driver
0x04	sns_stop	Sensor stopped

axes\_remap\_error: Axes remapped wrongly because a source axis is not assigned to more than one target axis.

odr\_50hz\_error: The minimum bandwidth conditions are not respected for the features which require 50 Hz data.

odr\_high\_error: The minimum bandwidth conditions are not respected for the single/double-tap detection.

**Register (0x40) ACC\_CONF**

DESCRIPTION: Set the output data rate, the bandwidth, and the performance mode of the acceleration sensor

RESET: 0xA8

DEFINITION (Go to [register map](#)):

Name	Register (0x40) ACC_CONF			
Bit	7	6	5	4
Read/Write	RW	RW	RW	RW
Reset Value	1	0	1	0
Content	acc_perf_mode		acc_bwp	
Bit	3	2	1	0
Read/Write	RW	RW	RW	RW
Reset Value	1	0	0	0
Content	acc_odr			

acc\_odr: ODR in Hz. The output data rate is independent of the power mode setting for the sensor, but not all settings are supported in all power modes.

acc_odr		
0x00	reserved	Reserved
0x01	odr_0p78	25/32
0x02	odr_1p5	25/16
0x03	odr_3p1	25/8
0x04	odr_6p25	25/4
0x05	odr_12p5	25/2
0x06	odr_25	25
0x07	odr_50	50
0x08	odr_100	100
0x09	odr_200	200
0x0a	odr_400	400
0x0b	odr_800	800
0x0c	odr_1k6	1600
0x0d	odr_3k2	Reserved
0x0e	odr_6k4	Reserved
0x0f	odr_12k8	Reserved

acc\_bwp: Bandwidth parameter, determines filter configuration (acc\_perf\_mode=1) and averaging for undersampling mode (acc\_perf\_mode=0)

acc_bwp		
0x00	osr4_avg1	acc_perf_mode = 1 -> OSR4 mode; acc_perf_mode = 0 -> no averaging
0x01	osr2_avg2	acc_perf_mode = 1 -> OSR2 mode; acc_perf_mode = 0 -> average 2 samples
0x02	norm_avg4	acc_perf_mode = 1 -> normal mode; acc_perf_mode = 0 -> average 4 samples
0x03	cic_avg8	acc_perf_mode = 1 -> Reserved; acc_perf_mode = 0 -> average 8 samples

0x04	res_avg16	acc_perf_mode = 1 -> Reserved; acc_perf_mode = 0 -> average 16 samples
0x05	res_avg32	acc_perf_mode = 1 -> Reserved; acc_perf_mode = 0 -> average 32 samples
0x06	res_avg64	acc_perf_mode = 1 -> Reserved; acc_perf_mode = 0 -> average 64 samples
0x07	res_avg128	acc_perf_mode = 1 -> Reserved; acc_perf_mode = 0 -> average 128 samples

acc\_perf\_mode: Select accelerometer filter performance mode

acc_perf_mode		
0x00	cic_avg	averaging mode.
0x01	cont	continuous filter function.

### Register (0x41) ACC\_RANGE

DESCRIPTION: Selection of Accelerometer g-range

RESET: 0x01

DEFINITION (Go to [register map](#)):

Name	Register (0x41) ACC_RANGE			
Bit	7	6	5	4
Read/Write	n/a	n/a	n/a	n/a
Reset Value	0	0	0	0
Content	reserved			
Bit	3	2	1	0
Read/Write	n/a	n/a	RW	RW
Reset Value	0	0	0	1
Content	reserved		acc_range	

acc\_range: Accelerometer g-range

acc_range		
0x00	range_2g	+/-2g
0x01	range_4g	+/-4g
0x02	range_8g	+/-8g
0x03	range_16g	+/-16g

**Register (0x44) AUX\_CONF**

DESCRIPTION: Set the output data rate of the Auxiliary interface

RESET: 0x46

DEFINITION (Go to [register map](#)):

Name	Register (0x44) AUX_CONF			
Bit	7	6	5	4
Read/Write	RW	RW	RW	RW
Reset Value	0	1	0	0
Content	aux_offset			
Bit	3	2	1	0
Read/Write	RW	RW	RW	RW
Reset Value	0	1	1	0
Content	aux_odr			

aux\_odr: Select the poll rate for the sensor attached to the Auxiliary interface.

aux_odr		
0x00	reserved	Reserved
0x01	odr_0p78	25/32
0x02	odr_1p5	25/16
0x03	odr_3p1	25/8
0x04	odr_6p25	25/4
0x05	odr_12p5	25/2
0x06	odr_25	25
0x07	odr_50	50
0x08	odr_100	100
0x09	odr_200	200
0x0a	odr_400	400
0x0b	odr_800	800
0x0c	odr_1k6	Reserved
0x0d	odr_3k2	Reserved
0x0e	odr_6k4	Reserved
0x0f	odr_12k8	Reserved

aux\_offset: Trigger-readout offset in units of 2.5 ms. If set to zero, the offset is maximum, i.e. after readout a trigger is issued immediately.

**Register (0x45) FIFO\_DOWNS**

DESCRIPTION: Configure Accelerometer downsampling rates for FIFO

RESET: 0x80

DEFINITION (Go to [register map](#)):

Name	Register (0x45) FIFO_DOWNS			
Bit	7	6	5	4
Read/Write	RW	RW	RW	RW
Reset Value	1	0	0	0
Content	acc_fifo_filt_data	acc_fifo_downs		
Bit	3	2	1	0
Read/Write	n/a	n/a	n/a	n/a
Reset Value	0	0	0	0
Content	reserved			

acc\_fifo\_downs: Downsampling for accelerometer data (by  $2^{**}acc\_fifo\_downs$ )

acc\_fifo\_filt\_data: Select filtered or unfiltered Accelerometer data for FIFO

acc_fifo_filt_data		
0x00	unfiltered	Unfiltered data
0x01	filtered	Filtered data

**Register (0x46) FIFO\_WTM\_0**

DESCRIPTION: FIFO Watermark level LSB, unit is byte.

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x46) FIFO_WTM_0			
Bit	7	6	5	4
Read/Write	RW	RW	RW	RW
Reset Value	0	0	0	0
Content	fifo_water_mark_7_0			
Bit	3	2	1	0
Read/Write	RW	RW	RW	RW
Reset Value	0	0	0	0
Content	fifo_water_mark_7_0			

**Register (0x47) FIFO\_WTM\_1**

DESCRIPTION: FIFO Watermark level MSB

RESET: 0x02

DEFINITION (Go to [register map](#)):

Name	Register (0x47) FIFO_WTM_1			
Bit	7	6	5	4
Read/Write	n/a	n/a	n/a	RW
Reset Value	0	0	0	0
Content	reserved			fifo_water_mark_1_2_8
Bit	3	2	1	0
Read/Write	RW	RW	RW	RW
Reset Value	0	0	1	0
Content	fifo_water_mark_12_8			

**Register (0x48) FIFO\_CONFIG\_0**

DESCRIPTION: FIFO frame content configuration

RESET: 0x02

DEFINITION (Go to [register map](#)):

Name	Register (0x48) FIFO_CONFIG_0			
Bit	7	6	5	4
Read/Write	n/a	n/a	n/a	n/a
Reset Value	0	0	0	0
Content	reserved			
Bit	3	2	1	0
Read/Write	n/a	n/a	RW	RW
Reset Value	0	0	1	0
Content	reserved		fifo_time_en	fifo_stop_on_full

fifo\_stop\_on\_full: Stop writing samples into FIFO when FIFO is full

fifo_stop_on_full		
0x00	disable	do not stop writing to FIFO when full
0x01	enable	Stop writing into FIFO when full.

fifo\_time\_en: Return sensortime frame after the last valid data frame

fifo_time_en		
0x00	disable	do not return sensortime frame
0x01	enable	return sensortime frame

**Register (0x49) FIFO\_CONFIG\_1**

DESCRIPTION: FIFO frame content configuration

RESET: 0x10

DEFINITION (Go to [register map](#)):

Name	Register (0x49) FIFO_CONFIG_1			
Bit	7	6	5	4
Read/Write	n/a	RW	RW	RW
Reset Value	0	0	0	1
Content	reserved	fifo_acc_en	fifo_aux_en	fifo_header_en
Bit	3	2	1	0
Read/Write	RW	RW	n/a	n/a
Reset Value	0	0	0	0
Content	fifo_tag_int1_en	fifo_tag_int2_en	reserved	

fifo\_tag\_int2\_en: FIFO interrupt 2 tag enable

fifo_tag_int2_en		
0x00	disable	Disable tag
0x01	enable	Enable tag

fifo\_tag\_int1\_en: FIFO interrupt 1 tag enable

fifo_tag_int1_en		
0x00	disable	Disable tag
0x01	enable	Enable tag

fifo\_header\_en: FIFO frame header enable

fifo_header_en		
0x00	disable	No header is stored (output data rate of all enabled sensors need to be identical)
0x01	enable	header is stored

fifo\_aux\_en: Store Auxiliary data in FIFO (all 3 axes)

fifo_aux_en		
0x00	disable	No Auxiliary data is stored
0x01	enable	Auxiliary data is stored

fifo\_acc\_en: Store Accelerometer data in FIFO (all 3 axes)

fifo_acc_en		
0x00	disable	No Accelerometer data is stored
0x01	enable	Accelerometer data is stored

**Register (0x4B) AUX\_DEV\_ID**

DESCRIPTION: Auxiliary interface slave device address

RESET: 0x20

DEFINITION (Go to [register map](#)):

Name	Register (0x4B) AUX_DEV_ID			
Bit	7	6	5	4
Read/Write	RW	RW	RW	RW
Reset Value	0	0	1	0
Content	i2c_device_addr			
Bit	3	2	1	0
Read/Write	RW	RW	RW	n/a
Reset Value	0	0	0	0
Content	i2c_device_addr			reserved

i2c\_device\_addr: I2C device address of Auxiliary slave

**Register (0x4C) AUX\_IF\_CONF**

DESCRIPTION: Auxiliary interface configuration

RESET: 0x83

DEFINITION (Go to [register map](#)):

Name	Register (0x4C) AUX_IF_CONF			
Bit	7	6	5	4
Read/Write	RW	n/a	n/a	n/a
Reset Value	1	0	0	0
Content	aux_manual_en	reserved		
Bit	3	2	1	0
Read/Write	n/a	n/a	RW	RW
Reset Value	0	0	1	1
Content	reserved		aux_rd_burst	

aux\_rd\_burst: Burst data length (1, 2, 6 and 8 bytes)

aux_rd_burst		
0x00	BL1	Burst length 1
0x01	BL2	Burst length 2
0x02	BL6	Burst length 6
0x03	BL8	Burst length 8

aux\_manual\_en: Enable auxiliary interface manual mode

aux_manual_en		
0x00	disable	Data mode
0x01	enable	Setup mode



**Register (0x4D) AUX\_RD\_ADDR**

DESCRIPTION: Auxiliary interface read register address

RESET: 0x42

DEFINITION (Go to [register map](#)):

Name	Register (0x4D) AUX_RD_ADDR			
Bit	7	6	5	4
Read/Write	RW	RW	RW	RW
Reset Value	0	1	0	0
Content	read_addr			
Bit	3	2	1	0
Read/Write	RW	RW	RW	RW
Reset Value	0	0	1	0
Content	read_addr			

read\_addr: Address to read

**Register (0x4E) AUX\_WR\_ADDR**

DESCRIPTION: Auxiliary interface write register address

RESET: 0x4C

DEFINITION (Go to [register map](#)):

Name	Register (0x4E) AUX_WR_ADDR			
Bit	7	6	5	4
Read/Write	RW	RW	RW	RW
Reset Value	0	1	0	0
Content	write_addr			
Bit	3	2	1	0
Read/Write	RW	RW	RW	RW
Reset Value	1	1	0	0
Content	write_addr			

write\_addr: Address to write

**Register (0x4F) AUX\_WR\_DATA**

DESCRIPTION: Auxiliary interface write data

RESET: 0x02

DEFINITION (Go to [register map](#)):

Name	Register (0x4F) AUX_WR_DATA			
Bit	7	6	5	4
Read/Write	RW	RW	RW	RW
Reset Value	0	0	0	0
Content	write_data			
Bit	3	2	1	0
Read/Write	RW	RW	RW	RW
Reset Value	0	0	1	0
Content	write_data			

write\_data: Data to write

**Register (0x53) INT1\_IO\_CTRL**

DESCRIPTION: Configure the electrical behavior of interrupt pins

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x53) INT1_IO_CTRL			
Bit	7	6	5	4
Read/Write	n/a	n/a	n/a	RW
Reset Value	0	0	0	0
Content	reserved			input_en
Bit	3	2	1	0
Read/Write	RW	RW	RW	RW
Reset Value	0	0	0	0
Content	output_en	od	lvl	edge_ctrl

edge\_ctrl: Configure trigger condition of INT1 pin (input)

edge_ctrl		
0x00	level_tr	Level
0x01	edge_tr	Edge

lvl: Configure output level of INT1 pin

lvl		
0x00	active_low	active low
0x01	active_high	active high

od: Configure output behavior of INT1 pin to open drain.

od		
0x00	push_pull	push-pull
0x01	open_drain	open drain

output\_en: Output enable for INT1 pin

output_en		
0x00	off	Output disabled
0x01	on	Output enabled

input\_en: Input enable for INT1 pin

input_en		
0x00	off	Input disabled
0x01	on	Input enabled

## Register (0x54) INT2\_IO\_CTRL

DESCRIPTION: Configure the electrical behavior of the interrupt pins

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x54) INT2_IO_CTRL			
Bit	7	6	5	4
Read/Write	n/a	n/a	n/a	RW
Reset Value	0	0	0	0
Content	reserved			input_en
Bit	3	2	1	0
Read/Write	RW	RW	RW	RW
Reset Value	0	0	0	0
Content	output_en	od	lvl	edge_ctrl

edge\_ctrl: Configure trigger condition of INT2 pin (input)

edge_ctrl		
0x00	level_tr	Level
0x01	edge_tr	Edge

lvl: Configure output level of INT2 pin

lvl		
0x00	active_low	active low
0x01	active_high	active high

od: Configure output behavior of INT2 pin to open drain

od		
0x00	push_pull	push-pull
0x01	open_drain	open drain

output\_en: Output enable for INT2 pin

output_en		
0x00	off	Output disabled
0x01	on	Output enabled

input\_en: Input enable for INT2 pin

input_en		
0x00	off	Input disabled
0x01	on	Input enabled

### Register (0x55) INT\_LATCH

DESCRIPTION: Configure interrupt latch modes

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x55) INT_LATCH			
Bit	7	6	5	4
Read/Write	n/a	n/a	n/a	n/a
Reset Value	0	0	0	0
Content	reserved			
Bit	3	2	1	0
Read/Write	n/a	n/a	n/a	RW
Reset Value	0	0	0	0
Content	reserved			int_latch

int\_latch: Latched/non-latched interrupt modes

int_latch		
0x00	none	non latched
0x01	permanent	latched

**Register (0x56) INT1\_MAP**

DESCRIPTION: Map interrupt/feature sources to INT1

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x56) INT1_MAP			
Bit	7	6	5	4
Read/Write	RW	RW	RW	n/a
Reset Value	0	0	0	0
Content	error_int_out	no_motion_out	any_motion_out	double_tap_out
Bit	3	2	1	0
Read/Write	RW	RW	RW	n/a
Reset Value	0	0	0	0
Content	wrist_wear_wakeu p_out	activity_type_out	step_counter_out	single_tap_out

single_tap_out:	Single-tap output
step_counter_out:	Step counter watermark or step detector output
activity_type_out:	Step counter activity output (Running, Walking, Still)
wrist_wear_wakeup_out:	Wrist wear wakeup output
double_tap_out:	Double-tap output
any_motion_out:	Any-motion detection output
no_motion_out:	No-motion detection output
error_int_out:	Error interrupt output

**Register (0x57) INT2\_MAP**

DESCRIPTION: Map interrupt/feature sources to INT2

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x57) INT2_MAP			
Bit	7	6	5	4
Read/Write	RW	RW	RW	n/a
Reset Value	0	0	0	0
Content	error_int_out	no_motion_out	any_motion_out	double_tap_out
Bit	3	2	1	0
Read/Write	RW	RW	RW	n/a
Reset Value	0	0	0	0
Content	wrist_wear_wakeu p_out	activity_type_out	step_counter_out	single_tap_out

single_tap_out:	Single-tap output
step_counter_out:	Step counter watermark or step detector output.
activity_type_out:	Step counter activity output (Running, Walking, Still)
wrist_wear_wakeup_out:	Wrist wear wakeup output
double_tap_out:	Double-tap output
any_motion_out:	Any-motion detection output

no\_motion\_out: No-motion detection output  
 error\_int\_out: Error interrupt output

### Register (0x58) INT\_MAP\_DATA

DESCRIPTION: Map interrupt sources to hardware interrupts

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x58) INT_MAP_DATA			
Bit	7	6	5	4
Read/Write	n/a	RW	RW	RW
Reset Value	0	0	0	0
Content	reserved	int2_drdy	int2_fwm	int2_full
Bit	3	2	1	0
Read/Write	n/a	RW	RW	RW
Reset Value	0	0	0	0
Content	reserved	int1_drdy	int1_fwm	int1_full

int1\_full: FIFO Full interrupt mapped to INT1  
 int1\_fwm: FIFO Watermark interrupt mapped to INT1  
 int1\_drdy: Data Ready interrupt mapped to INT1  
 int2\_full: FIFO Full interrupt mapped to INT2  
 int2\_fwm: FIFO Watermark interrupt mapped to INT2  
 int2\_drdy: Data Ready interrupt mapped to INT2

### Register (0x59) INIT\_CTRL

DESCRIPTION: Start initialization

RESET: 0x90

DEFINITION (Go to [register map](#)):

Name	Register (0x59) INIT_CTRL			
Bit	7	6	5	4
Read/Write	RW	RW	RW	RW
Reset Value	1	0	0	1
Content	init_ctrl			
Bit	3	2	1	0
Read/Write	RW	RW	RW	RW
Reset Value	0	0	0	0
Content	init_ctrl			

init\_ctrl: Commands to start initialization

init_ctrl		
0x00	Load configuration file	Enable the mode for accept configuration file
0x01	Start initialization	Enable sensor features after loading configuration file

Note: The commands should not be used more than once after POR or soft-reset, and the initialization procedures described in chapter 1 should be strictly followed.

## Register (0x5E) FEATURES\_IN

DESCRIPTION: Feature configuration read/write port

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x5E) FEATURES_IN			
Bit	7	6	5	4
Read/Write	RW	RW	RW	RW
Reset Value	0	0	0	0
Content	features_in			
Bit	3	2	1	0
Read/Write	RW	RW	RW	RW
Reset Value	0	0	0	0
Content	features_in			

features\_in: Feature configuration read/write data. Note that the parameters described here is 16-bit, while the address is 8-bit.

Address	Bit	Name	Description	Reset	Access
any_motion					
0x5E: 0x00		settings_1	Any-motion detection general configuration flags - part 1	0x00AA	
	10...0	threshold	Slope threshold value for Any-motion detection in 5.11g format. Range is 0 to 1g. Default value is 0xAA = 83mg = 0xAA * (1/2^11)mg.	0xAA	RW
0x5E: 0x02		settings_2	Any-motion detection general configuration flags - part 2	0x0005	
	12...0	duration	Defines the number of consecutive data points for which the threshold condition must be respected, for interrupt assertion. It is expressed in in 50 Hz samples (20 ms). Range is 0 to 163sec. Default value is 5=100ms.	0x5	RW
	13	x_en	Enables the feature on a per-axis basis	0x0	RW
	14	y_en	Enables the feature on a per-axis basis	0x0	RW
	15	z_en	Enables the feature on a per-axis basis	0x0	RW
no_motion					
0x5E: 0x04		settings_1	No-motion detection general configuration flags - part 1	0x00AA	
	10...0	threshold	Slope threshold value for No-motion detection in 5.11g format. Range is 0 to	0xAA	RW

			1g. Default value is 0xAA = 83mg = 0xAA * (1/2 <sup>11</sup> )mg.		
0x5E: 0x06		settings_2	No-motion detection general configuration flags - part 2	0x0005	
	12...0	duration	Defines the number of consecutive data points for which the threshold condition must be respected, for interrupt assertion. It is expressed in 50 Hz samples (20 ms). Range is 0 to 163sec. Default value is 5=100ms.	0x5	RW
	13	x_en	Enables the feature on a per-axis basis	0x0	RW
	14	y_en	Enables the feature on a per-axis basis	0x0	RW
	15	z_en	Enables the feature on a per-axis basis	0x0	RW
step_counter					
0x5E: 0x08		settings_1	Step Counter setting	0x012D	
	15...0	param_1	Step Counter param 1	0x12D	RW
0x5E: 0x0A		settings_2	Step Counter setting	0x7BD4	
	15...0	param_2	Step Counter param 2	0x7BD4	RW
0x5E: 0x0C		settings_3	Step Counter setting	0x013B	
	15...0	param_3	Step Counter param 3	0x13B	RW
0x5E: 0x0E		settings_4	Step Counter setting	0x7ADB	
	15...0	param_4	Step Counter param 4	0x7ADB	RW
0x5E: 0x10		settings_5	Step Counter setting	0x0004	
	15...0	param_5	Step Counter param 5	0x4	RW
0x5E: 0x12		settings_6	Step Counter setting	0x7B3F	
	15...0	param_6	Step Counter param 6	0x7B3F	RW
0x5E: 0x14		settings_7	Step Counter setting	0x6CCD	
	15...0	param_7	Step Counter param 7	0x6CCD	RW
0x5E: 0x16		settings_8	Step Counter setting	0x04C3	
	15...0	param_8	Step Counter param 8	0x4C3	RW
0x5E: 0x18		settings_9	Step Counter setting	0x0985	
	15...0	param_9	Step Counter param 9	0x985	RW
0x5E: 0x1A		settings_10	Step Counter setting	0x04C3	
	15...0	param_10	Step Counter param 10	0x4C3	RW
0x5E: 0x1C		settings_11	Step Counter setting	0xE6EC	
	15...0	param_11	Step Counter param 11	0xE6EC	RW
0x5E: 0x1E		settings_12	Step Counter setting	0x460C	
	15...0	param_12	Step Counter param 12	0x460C	RW
0x5E: 0x20		settings_13	Step Counter setting	0x0001	
	15...0	param_13	Step Counter param 13	0x1	RW
0x5E: 0x22		settings_14	Step Counter setting	0x0027	
	15...0	param_14	Step Counter param 14	0x27	RW
0x5E: 0x24		settings_15	Step Counter setting	0x0019	
	15...0	param_15	Step Counter param 15	0x19	RW
0x5E: 0x26		settings_16	Step Counter setting	0x0096	
	15...0	param_16	Step Counter param 16	0x96	RW
0x5E: 0x28		settings_17	Step Counter setting	0x00A0	



	15...0	param_17	Step Counter param 17	0xA0	RW
0x5E: 0x2A		settings_18	Step Counter setting	0x0001	
	15...0	param_18	Step Counter param 18	0x1	RW
0x5E: 0x2C		settings_19	Step Counter setting	0x000C	
	15...0	param_19	Step Counter param 19	0xC	RW
0x5E: 0x2E		settings_20	Step Counter setting	0x3CF0	
	15...0	param_20	Step Counter param 20	0x3CF0	RW
0x5E: 0x30		settings_21	Step Counter setting	0x0100	
	15...0	param_21	Step Counter param 21	0x100	RW
0x5E: 0x32		settings_22	Step Counter setting	0x0001	
	15...0	param_22	Step Counter param 22	0x1	RW
0x5E: 0x34		settings_23	Step Counter setting	0x0003	
	15...0	param_23	Step Counter param 23	0x3	RW
0x5E: 0x36		settings_24	Step Counter setting	0x0001	
	15...0	param_24	Step Counter param 24	0x1	RW
0x5E: 0x38		settings_25	Step Counter setting	0x000E	
	15...0	param_25	Step Counter param 25	0xE	RW
0x5E: 0x3A		settings_26	Step Counter and Step Detector Settings	0x0000	
	9...0	watermark_level	Watermark level; the Step-counter will trigger output every time this number of steps are counted. Holds implicitly a 20x factor, so the range is 0 to 20460, with resolution of 20 steps. If 0, the output is disabled.	0x0	RW
	10	reset_counter	Flag to reset the counted steps. This is only interpreted if the step counter is enabled.	0x0	RW
	11	en_detector	Enables the Step Detector.	0x0	RW
	12	en_counter	Enables the Step Counter.	0x0	RW
	13	en_activity	Enables the activity detection (Running, Walking, or Still)	0x0	RW
<b>single_tap</b>					
0x5E: 0x3C		settings	Single-tap general configuration flags	0x0006	
	0	enable	Enables the feature	0x0	RW
	3...1	sensitivity	Configures single-tap sensitivity, the range goes from 0 (high sensitive) to 7 (low sensitive).	0x3	RW
<b>Double_tap</b>					
0x5E: 0x3E		settings	Double-tap general configuration flags	0x0006	
	0	enable	Enables the feature	0x0	RW
	3...1	sensitivity	Configures single-tap sensitivity, the range goes from 0 (high sensitive) to 7 (low sensitive).	0x3	RW
<b>wrist_wear_wakeup</b>					
0x5E: 0x40		settings	Wrist wear wakeup configuration flags	0x0000	
	0	enable	Enables the feature	0x0	RW

general_settings					
0x5E: 0x42		config_id	Describes configuration identification code	0x0000	
	15...0	identification	Describes configuration identification code	0x0	R
0x5E: 0x44		axes_remapping	Describes axes remapping	0x0088	
	1...0	map_x_axis	Map the x axis to desired axis. <b>Value</b> <b>Name</b> <b>Description</b> 0x00   x axis   Map to x-axis 0x01   y axis   Map to y-axis 0x02   z axis   Map to z-axis 0x03   reserved   Reserved	0x0	RW
	2	map_x_axis_sign	Map the x axis sign to the desired one. <b>Value</b> <b>Name</b> <b>Description</b> 0x00   non-inverted   Clear this bit to Keep the original direction of x axis 0x01   inverted   Set this bit to invert the x axis	0x0	RW
	4...3	map_y_axis	Map the y axis to desired axis <b>Value</b> <b>Name</b> <b>Description</b> 0x00   x axis   Map to x-axis 0x01   y axis   Map to y-axis 0x02   z axis   Map to z-axis 0x03   reserved   Reserved	0x1	RW
	5	map_y_axis_sign	Map the y axis sign to the desired one <b>Value</b> <b>Name</b> <b>Description</b> 0x00   non-inverted   Clear this bit to Keep the original direction of y axis 0x01   inverted   Set this bit to invert the y axis	0x0	RW
	7...6	map_z_axis	Map the z axis to desired axis <b>Value</b> <b>Name</b> <b>Description</b> 0x00   x axis   Map to x-axis 0x01   y axis   Map to y-axis 0x02   z axis   Map to z-axis 0x03   reserved   reserved	0x2	RW
	8	map_z_axis_sign	Map the z axis sign to the desired one <b>Value</b> <b>Name</b> <b>Description</b> 0x00   non-inverted   Clear this bit to Keep the original direction of z axis 0x01   inverted   Set this bit to invert the z axis	0x0	RW

**Register (0x5F) INTERNAL\_ERROR**

DESCRIPTION: Internal error flags

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x5F) INTERNAL_ERROR			
Bit	7	6	5	4
Read/Write	n/a	n/a	n/a	n/a
Reset Value	0	0	0	0
Content	reserved			
Bit	3	2	1	0
Read/Write	n/a	R	R	n/a
Reset Value	0	0	0	0
Content	reserved	int_err_2	int_err_1	reserved

int\_err\_1: Internal error flag - long processing time, processing halted

int\_err\_2: Internal error flag - fatal error, processing halted

**Register (0x6A) NVM\_CONF**

DESCRIPTION: NVM controller mode (Prog/Erase or Read only)

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x6A) NVM_CONF			
Bit	7	6	5	4
Read/Write	n/a	n/a	n/a	n/a
Reset Value	0	0	0	0
Content	reserved			
Bit	3	2	1	0
Read/Write	n/a	n/a	RW	n/a
Reset Value	0	0	0	0
Content	reserved		nvm_prog_en	reserved

nvm\_prog\_en: Enable NVM programming

nvm_prog_en		
0x00	disable	disable
0x01	enable	enable

**Register (0x6B) IF\_CONF**

DESCRIPTION: Serial interface settings

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x6B) IF_CONF			
Bit	7	6	5	4
Read/Write	n/a	n/a	n/a	RW
Reset Value	0	0	0	0
Content	reserved			if_mode
Bit	3	2	1	0
Read/Write	n/a	n/a	n/a	RW
Reset Value	0	0	0	0
Content	reserved			spi3

spi3: Configure SPI Interface Mode for primary interface

spi3		
0x00	spi4	SPI 4-wire mode
0x01	spi3	SPI 3-wire mode

if\_mode: Auxiliary interface configuration

if_mode		
0x00	p_auto_s_off	Auxiliary interface:off
0x01	p_auto_s_mag	Auxiliary interface:Magnetometer

**Register (0x6D) ACC\_SELF\_TEST**

DESCRIPTION: Settings for the sensor self-test configuration and trigger

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x6D) ACC_SELF_TEST			
Bit	7	6	5	4
Read/Write	n/a	n/a	n/a	n/a
Reset Value	0	0	0	0
Content	reserved			
Bit	3	2	1	0
Read/Write	RW	RW	n/a	RW
Reset Value	0	0	0	0
Content	acc_self_test_amp	acc_self_test_sign	reserved	acc_self_test_en

acc\_self\_test\_en: Enable accelerometer self-test

acc_self_test_en		
0x00	disabled	disabled
0x01	enabled	enabled

acc\_self\_test\_sign: Select sign of self-test excitation as

acc_self_test_sign		
0x00	negative	negative
0x01	positive	positive

acc\_self\_test\_amp: Select amplitude of the self-test deflection:

acc_self_test_amp		
0x00	low	low
0x01	high	high

### Register (0x70) NV\_CONF

DESCRIPTION: NVM backed configuration bits (check datasheet for details)

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x70) NV_CONF			
Bit	7	6	5	4
Read/Write	n/a	n/a	n/a	n/a
Reset Value	0	0	0	0
Content	reserved			
Bit	3	2	1	0
Read/Write	RW	RW	RW	RW
Reset Value	0	0	0	0
Content	acc_off_en	i2c_wdt_en	i2c_wdt_sel	spi_en

spi\_en: Disable the I2C and enable SPI for the primary interface, when it is in autoconfig mode (refer to the datasheet for details)

spi_en		
0x00	disabled	I2C enabled
0x01	enabled	I2C disabled

i2c\_wdt\_sel: Select timer period for I2C Watchdog

i2c_wdt_sel		
0x00	wdt_short	I2C watchdog timeout after 1.25 ms
0x01	wdt_long	I2C watchdog timeout after 40 ms

i2c\_wdt\_en: I2C Watchdog at the SDA pin in I2C interface mode

i2c_wdt_en		
0x00	Disable	Disable I2C watchdog
0x01	Enable	Enable I2C watchdog

acc\_off\_en: Add the offset defined in the off\_acc\_x/y/z OFFSET register to filtered and unfiltered Accelerometer data

acc_off_en		
0x00	disabled	Disabled
0x01	enabled	Enabled

### Register (0x71) OFFSET\_0

DESCRIPTION: Offset compensation for Accelerometer X-axis (NVM backed)

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x71) OFFSET_0			
Bit	7	6	5	4
Read/Write	RW	RW	RW	RW
Reset Value	0	0	0	0
Content	off_acc_x			
Bit	3	2	1	0
Read/Write	RW	RW	RW	RW
Reset Value	0	0	0	0
Content	off_acc_x			

off\_acc\_x: Accelerometer offset compensation (X-axis)

### Register (0x72) OFFSET\_1

DESCRIPTION: Offset compensation for Accelerometer Y-axis (NVM backed)

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x72) OFFSET_1			
Bit	7	6	5	4
Read/Write	RW	RW	RW	RW
Reset Value	0	0	0	0
Content	off_acc_y			
Bit	3	2	1	0
Read/Write	RW	RW	RW	RW
Reset Value	0	0	0	0
Content	off_acc_y			

off\_acc\_y: Accelerometer offset compensation (Y-axis)

**Register (0x73) OFFSET\_2**

DESCRIPTION: Offset compensation for Accelerometer Z-axis (NVM backed)

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x73) OFFSET_2			
Bit	7	6	5	4
Read/Write	RW	RW	RW	RW
Reset Value	0	0	0	0
Content	off_acc_z			
Bit	3	2	1	0
Read/Write	RW	RW	RW	RW
Reset Value	0	0	0	0
Content	off_acc_z			

off\_acc\_z: Accelerometer offset compensation (Z-axis)

**Register (0x7C) PWR\_CONF**

DESCRIPTION: Power mode configuration register

RESET: 0x03

DEFINITION (Go to [register map](#)):

Name	Register (0x7C) PWR_CONF			
Bit	7	6	5	4
Read/Write	n/a	n/a	n/a	n/a
Reset Value	0	0	0	0
Content	reserved			
Bit	3	2	1	0
Read/Write	n/a	n/a	RW	RW
Reset Value	0	0	1	1
Content	reserved		fifo_self_wakeup	adv_power_save

adv_power_save		
0x00	aps_off	Advanced power save disabled (fast clk always enabled).
0x01	aps_on	Advanced power mode enabled (slow clk is active when no measurement is ongoing.)

fifo_self_wakeup		
0x00	fsw_off	FIFO read disabled in advanced power saving mode.
0x01	fsw_on	FIFO read enabled after interrupt in advanced power saving mode.

**Register (0x7D) PWR\_CTRL**

DESCRIPTION: Sensor enable register

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x7D) PWR_CTRL			
Bit	7	6	5	4
Read/Write	n/a	n/a	n/a	n/a
Reset Value	0	0	0	0
Content	reserved			
Bit	3	2	1	0
Read/Write	n/a	RW	n/a	RW
Reset Value	0	0	0	0
Content	reserved	acc_en	reserved	aux_en

aux_en		
0x00	mag_off	Disables the auxiliary sensor.
0x01	mag_on	Enables the auxiliary sensor.

acc_en		
0x00	acc_off	Disables the Accelerometer.
0x01	acc_on	Enables the Accelerometer.

**Register (0x7E) CMD**

DESCRIPTION: Command Register

RESET: 0x00

DEFINITION (Go to [register map](#)):

Name	Register (0x7E) CMD			
Bit	7	6	5	4
Read/Write	RW	RW	RW	RW
Reset Value	0	0	0	0
Content	cmd			
Bit	3	2	1	0
Read/Write	RW	RW	RW	RW
Reset Value	0	0	0	0
Content	cmd			

cmd: Available commands (Note: Register will always read as 0x00):

cmd		
0xa0	nvm_prog	Writes the NVM backed registers into NVM
0xb0	fifo_flush	Clears all data in the FIFO, does not change FIFO_CONFIG and FIFO_DOWNS registers
0xb6	softreset	Triggers a reset, all user configuration settings are overwritten with their default state.



### 3. Document history and modification

Rev. No	Chapter	Description of modification/changes	Date
1.0		Document creation	August 2019
1.1	3	Disclaimer update	November 2020
1.2	Page 1 1 1.1 3 All	Notes adjusted General Interrupt pin configuration removed Initialization procedures added Disclaimer removed Links updated	January 2021

**Bosch Sensortec GmbH**

Gerhard-Kindler-Straße 9  
72770 Reutlingen / Germany

[contact@bosch-sensortec.com](mailto:contact@bosch-sensortec.com)  
[www.bosch-sensortec.com](http://www.bosch-sensortec.com)

Modifications reserved  
Specifications subject to change without notice  
Document number: BST-MAS-AN032-02  
Revision\_1.2\_202101